



# BOVALLS

*dörrbyggeri*

## Instructions for installing finger pinch guards

1. Put the different pieces on the floor and check with the installation manual as a blueprint that all pieces are included. (image 1).

2. The fingerguard should be mounted 5-10 mm above the threshold. This is easiest achieved if you put a supportive item below the guard. (image 2).

3. Fingerguard K-75 is mounted with 90 degree clips. Mount these on the frame. Thread the loop through the opening between the door leaf and the frame and push the back of the clip as close to the frame as possible. Use the pre-drilled mountings to screw the guard in place. If the opening in the door is too narrow to fit the clips, feed it through the gap between the door and frame from the other side (image 3a).

Fingerguard K-105 & K-130 do not have long clips, but simply small looped ones. These clips are screwed onto the thick part of the frame. Close the door, and mark the screw holes. Observe that the clips should be free from getting pinched by the door leaf, so leave a couple millimetres between them. Fold the flap back, and screw the clips into the frame.

Test that the guard is working as intended by opening and closing the door (image 3b).

4. Now it is time to mount the plastic pipe on the other side of the door leaf. Thread the pipe over the top loops on the clips, then thread one of the still loose clips into the pipe (image 4a). Observe that the open end of the clip should be turned towards the door leaf. (image 4b). The pipe should rest against / on top of the lowest hinge (image 4c). Screw the last clip into the frame slightly above the lowest hinge.

K-105 & K-130 have loose clips for the plastic pipe, 3 for the upper and 2 for the lower pipe. Distribute the clips evenly along the pipe and screw them into the frame.

5. Lock the plastic pipe in place by putting a flat screwdriver in the clip opening to widen the inner loop. (image 5a). Add the plastic lid in the opening on top of the pipe (Image 5b).

6. Mount the short plastic pipe underneath the hinge and lock it in place the same way you did with the other clips (image 6). Shorten the pipe if necessary.

7. Test the fingerguard a final time to see that everything works as intended by opening and closing the door.

1.



2.



3a.



3a.



3b.



4a.



4a.



4a.




4b.



4c.



5a.

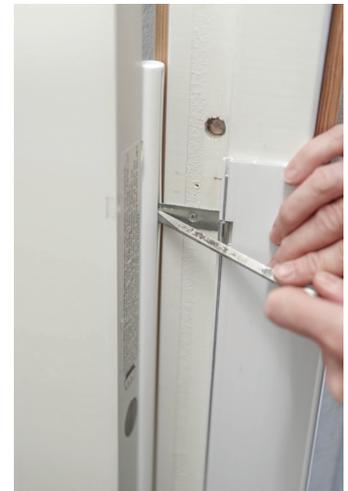

5b.



6.



6.

